

## **WARNING:**

CHOKING HAZARD—Toy contains a small

The product contains functional sharp points and sharp edge. Not for children under 4 years. Adult supervision required.

ball and small parts. Not for children under 3 years.









## Assembly:

1 Sticker

Start with sanding each wood piece to remove any rough edges. Remember to sand in the direction of the wood grain. Glue and nail the pieces together. Allow glue to completely dry.

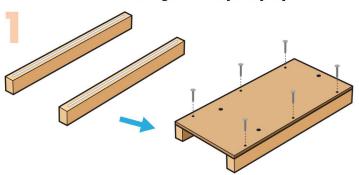


**Step 1** — Place both **side pieces** on their long, narrow edges. Glue the **court** on top. Ensure the corner edges are even. Nail them together with 6 nails.

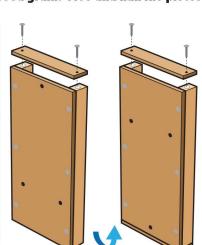

Step 2 — Stand the project up. Glue one **end piece** on top. Make sure the corner edges are even. Nail them together with 2 nails.


• #2 Phillips Screwdriver

 Turn the **project** over and repeat to attach the other end piece. Set aside for now.



**Step 3**—Identify the **backboard**. The side with the lines is the front, and the edge with the 2 nail holes is the bottom.

Lay the **pole** flat. Apply a thin line of glue to the top edge and place the backboard on top. Align them together using the lines. Ensure the top edges are even. Nail them together with 2 nails.

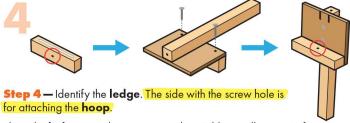


Place the **ledge** on its long, narrow edge. Add a small amount of glue to the top. Place the backboard's bottom edge on the ledge. Ensure the screw hole for the **hoop** faces up when right side up. Ensure the side and bottom edges are even. Carefully nail them together with 2 nails.

Attention: When painting, to ensure smooth ball launching, do not paint the frame pieces or shaft. You can paint the rim orange as shown. Allow the paint to dry completely



Step 5 — Identify 5 short screws, 1 medium screw, and 2 long screws. Make sure you use the correct size screws in the next steps.

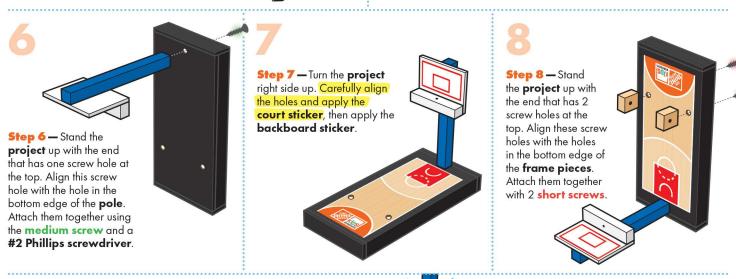



The large hole in the **launcher** should be positioned at the front edge.

Next, position the **assembly** between the **frame pieces**, ensuring the top and side edges are flush and screw holes are aligned.

Secure them with 2 long screws, adjusting the screws so that the launcher operates smoothly—neither too tight nor too loose.

(Ver el dorso para instrucciones en español.)

TSCA TITLE VI Compliant

Step 10 — Attach the hoop to the ledge using a short screw. Apply the logo sticker of your choice on the court. FINAL FOUR At Home: Place the ball in the launcher and flick the launcher to score a basket!