



## **WARNING:** CHOKING HAZARD


Contains small parts and functional/sharp points. Not for children under 4 years old. Adult supervision required.






Made in Chonburi, Thailand exclusively for The Home Depot by Houseworks, Ltd 2388 Pleasantdale Road, Atlanta, GA 30340  $\cdot$  batch #171103  $\cdot$  date: 09/17

**Finished** example.

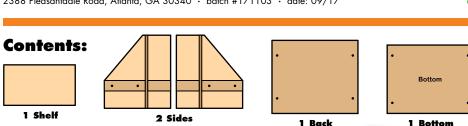








- Safety Goggles
- Fine Sandpaper
- **Wood Glue**











Start with sanding each wood piece to remove any rough edges. Remember to sand in the direction of the wood grain. Glue and nail the pieces together. Allow glue to completely dry.

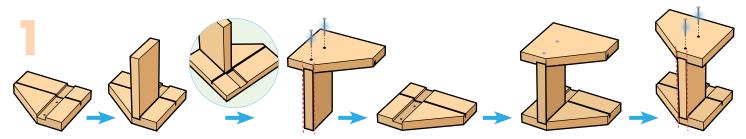


**Step 1**—Lay one of the **side pieces** flat with the slots facing up.

Place the short end of the shelf piece in the wider slot covering the 2 nail holes. The shelf piece does not cover the narrower slot. Carefully turn them over. Make sure the front edges are even. Using 2 long nails, nail them together. Repeat to attach the other side piece.

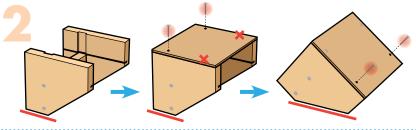

**Step 2—**Hold and stand the project onto the front edge. Glue the back piece to the back edges with outside edges even. Using 2 short nails, nail them together through the nail holes near the bottom.

Tilt the project onto the angled edge. Using 2 short nails, nail through the remaining nail holes.

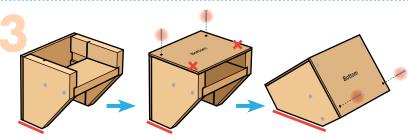

Step 3—Hold and stand the project onto the top edge. Glue the **bottom piece** to the bottom edges with outside edges even. Using 2 short nails, nail them together through the nail holes near the back.

Tilt the project onto the angled edge. Using 2 short nails, nail through the remaining nail holes.

Step 4-Stand the project right side up. Slide the **divider** into the slots.



**Step 5—**If you are painting the project, paint and wait to dry completely. Apply the stickers as follows.

First "Date" block: Apply the first group of number stickers, 0, 1, 2, 3, 4 and 5

Second "Date" block: Apply the second group of number stickers, 0, 1, 2, 6, 7and 8 (Use the 6 upside down for 9)

3 "Month" bars: Apply the 12 month stickers, one on each side of the bars

(Ver el dorso para instrucciones en español.)

California 93120 compliant for formaldehyde phase 2

