



WARNING:
CHOKING HAZARD – Small Parts.

Not for children under 3 years.


The product contains functional sharp points and sharp edge. Not for children under 4 years. Adult supervision required.



PIGGY BANK

Made in Thailand exclusively for The Home Depot by Houseworks, Ltd.
2388 Pleasantdale Road, Atlanta, GA 30340 · 71188 · Thailand 0824

Contents:

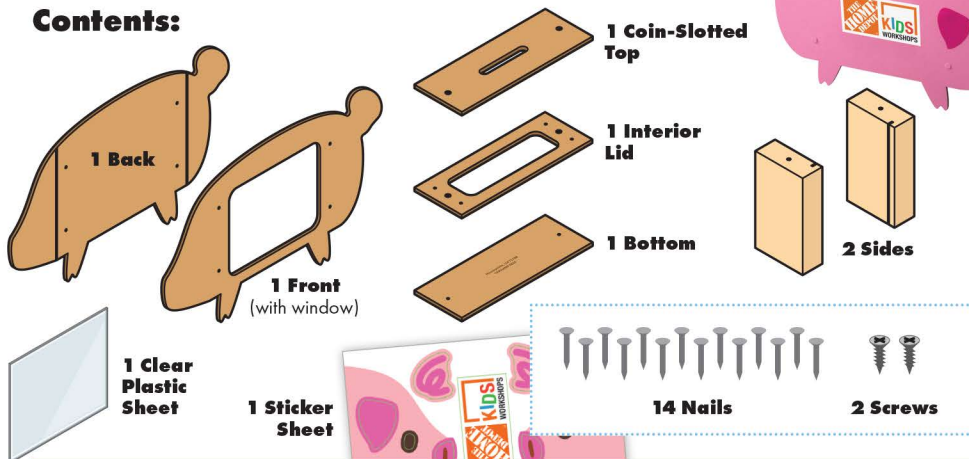

Finished example.



Scan with your camera or visit homedepot.com/kids for an easy-to-follow guide on how to assemble this kit, plus more fun videos.

ALSO NEEDED:

- Fine Sandpaper
- Wood Glue
- Hammer
- #2 Phillips Screwdriver

Assembly:

Start with sanding each wood piece to remove any rough edges. Remember to sand in the direction of the wood grain. Glue and nail the pieces together. Allow glue to completely dry.

1 **Step 1** — Stand both **side pieces** up with holes facing up and slots facing in.

2 **Step 2** — Place the **interior lid** on top. Make sure all corners are even. **Note:** The holes in the **side pieces** should be visible through the screw holes in the **interior lid**. Nail the corners together with 4 **nails**.

3 **Step 3** — Turn the **project** over. Remove the blue protective sheets from **both** sides of the **clear plastic sheet**. Slide it into the slots.

4 **Step 4** — Glue the **bottom piece** on top. Make sure all corners are even. Nail them together with 2 **nails**.

5 **Step 5** — Place the **back piece** flat with the guide lines facing up (the piggy facing left). Add thin lines of glue vertically between the nail holes.

With the **clear plastic sheet** side up, position the **project** between the guide lines, aligning the bottom edges.

Gently press the **project** down for about a minute to let the glue become sticky.

Carefully, hold both the **project** and **back piece** together and turn them over. Nail them together with 4 **nails**.

6 **Step 6** — Turn the **project** over. Add thin lines of glue on top of the **side pieces**. Place the **front piece** on top (the piggy facing left). Align the window's side edges with the **side pieces**, ensuring the bottom edges are even. Nail them together with 4 **nails**.

7 **Step 7** — Stand the **project** up. Wipe off any excess glue coming between the **front piece**, **interior lid**, and **back piece**. Place the **coin-slotted top** on the **interior lid**, aligning the holes. Attach with 2 **screws** using a #2 Phillips Screwdriver.

Attention: When painting, **don't paint the clear plastic sheet; wipe off any spills promptly.** Let it dry completely.

8 **Step 8** — Add **stickers** as shown above.

At Home: Start saving and watch your progress through the window. When ready, you can unscrew the **coin-slotted top** to retrieve your coins.

(Ver el dorso para instrucciones en español.)