



Step 1—Lay both **side pieces** down with the nail holes on top. Start 2 long nails. Stand the **front piece** up. Glue one nailed **side piece** on top. Make sure outside edges are even. Nail them together. Turn the project over. Repeat to attach the other **side piece**.



Step 2—Lay the project down. Add thin lines of glue to the top edge. Hold up the **bottom piece** and make sure the **nail** holes are over the **front** and **side pieces**. Then place it on top. Make sure all edges are even. Using 4 **short nails**, nail them together to form a **tray**.


Attention: If you are painting the project, paint and wait to dry completely before adding the sticker and attaching the hands and tray to the clock board.

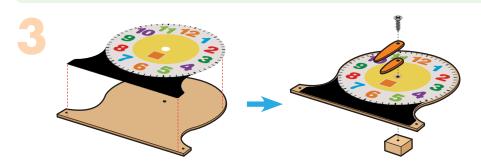

Step 3—Lay the **clock board** flat. Carefully add the **sticker**. Match the holes in both **hands** and the **clock board**. Insert a **screw** into the holes. Match the tip of the **screw** to the screw hole in the **base block** and drive the **screw** to attach the **hands** using a **#2 Phillips screwdriver**. Make sure it's tight enough for the **hands** to stay in place but also loose enough for you to adjust.

(Ver el dorso para instrucciones en español.)

California 93120 compliant for formaldehyde phase 2

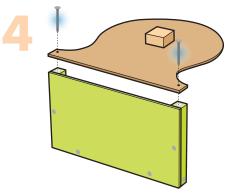

Step 4—Stand the **tray** on its front side. Add a little glue to the top of the **side pieces**. Place the **clock board** face side down on top. Make sure sides and bottom edges are even. Using 2 **long nails**, carefully nail them together.