



**WARNING:**  
**CHOKING HAZARD**  
 Toy contains small parts and functional/sharp points. Not for children under 3 years old. Adult supervision required.




5+

# BATTLESHIP

Made in Thailand exclusively for The Home Depot by Houseworks, Ltd.  
 2388 Pleasantdale Road, Atlanta, GA 30340 · 71138 · Thailand 0720




## Contents:

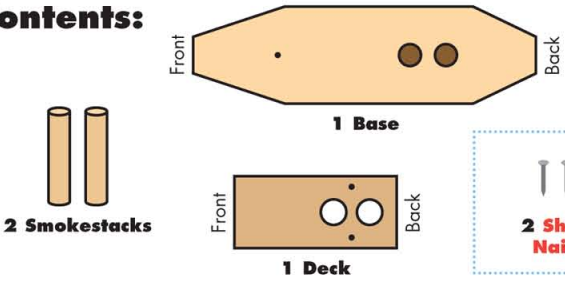


- ALSO NEEDED:**
- Fine Sandpaper
  - Wood Glue
  - Hammer
  - #2 Phillips Screwdriver

## Assembly:


Start with sanding each wood piece to remove any rough edges. Remember to sand in the direction of the wood grain. Glue and nail the pieces together. Allow glue to completely dry.

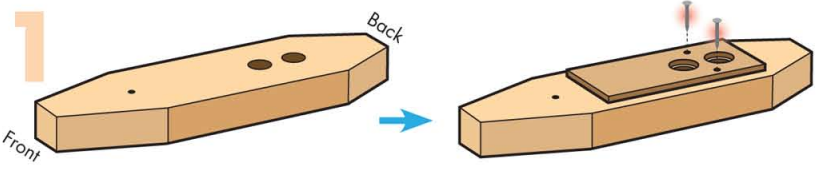


**Step 1**—Lay the **base** down with the holes on top. Place the **deck** on top and align the big holes. Using 2 **short nails**, nail them together.

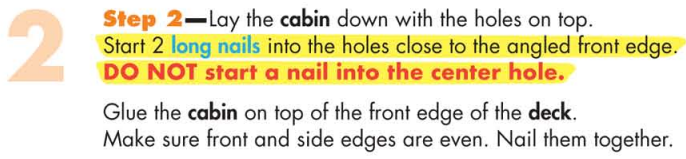


**Step 2**—Lay the **cabin** down with the holes on top. Start 2 **long nails** into the holes close to the angled front edge. **DO NOT start a nail into the center hole.** Glue the **cabin** on top of the front edge of the **deck**. Make sure front and side edges are even. Nail them together.

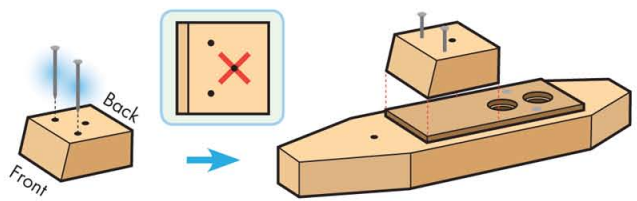

**Step 3**—Add a dot of glue inside of each big hole in the **base**. Push the **smokestacks** into the holes. Tap with a **hammer** if necessary.

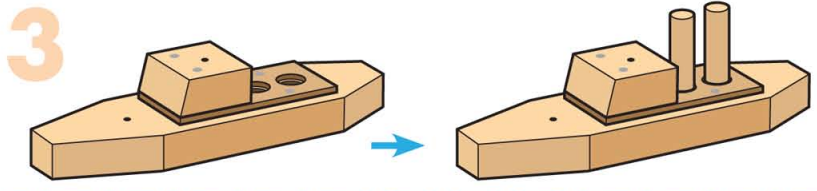

**Attention:** If you are painting the project, **DO NOT paint on or around the remaining holes in the base and cabin.** Allow the paint to dry completely.

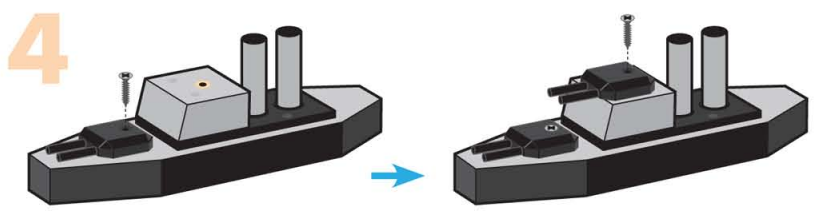

**Step 4**—Place a **turret** on the front of the **base** and align the holes. Using a #2 **Phillips Screwdriver**, attach the **turret** with a **screw**. Adjust the **screw** so that the **turret** moves. Repeat to attach the other **turret** on the **cabin**. Add the **stickers** as shown above.

(Ver el dorso para instrucciones en español.)