




**WARNING:**  
**CHOKING HAZARD** – Small Parts.  
Not for children under 3 years.  
The product contains functional sharp points and sharp edge. Not for children under 4 years.  
Adult supervision required.




# HOLIDAY COCOA MUG

Made in Thailand exclusively for The Home Depot by Houseworks, Ltd.  
2388 Pleasantdale Road, Atlanta, GA 30340 • 71199 • Thailand 0725


## Contents:

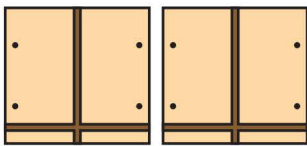

2 Sides




1 End



1 End with Cutout (for handle)



1 Top Insert

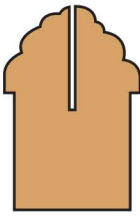

1 Bottom Insert



1 Bottom

1 Sticker Sheet



8 Nails



Scan or visit  
[homedepot.com/kids](https://www.homedepot.com/kids)  
for more projects and activities.




Finished example.

## ALSO NEEDED:


- Fine Sandpaper
- Wood Glue (optional)
- Hammer

## Assembly:


Start by sanding each wood piece to smooth any rough edges, following the grain. Glue is optional for added security. Let it dry completely.

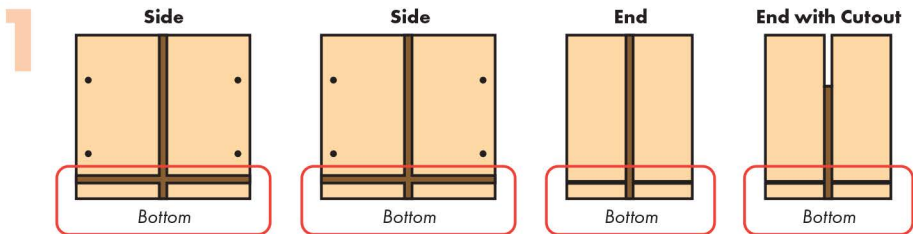


**Step 1** — Identify the **side pieces**, the **end piece**, and the **end piece with the cutout**. All four pieces have a vertical slot in the middle. Each **side piece** has a horizontal slot close to the bottom edge. Each **end piece** has a horizontal guide line close to the bottom edge.

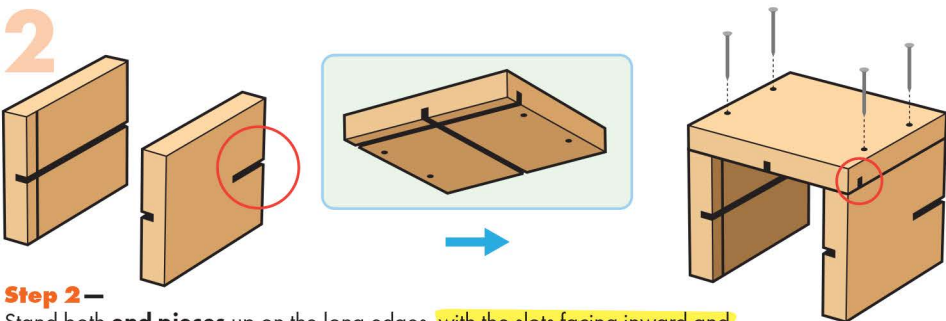


**Step 2** — Stand both **end pieces** up on the long edges, with the slots facing inward and the guide lines facing each other. Place a **side piece** on top with the slot side down, aligning its horizontal slot with the guide lines on the **end pieces**. Make sure all corners are even. Nail them together.

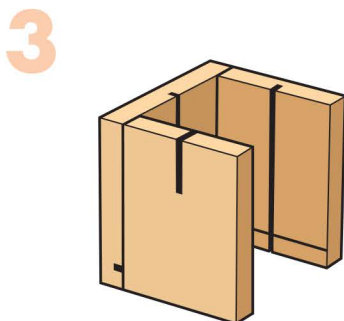

**Step 3** — Stand the **project** upright.

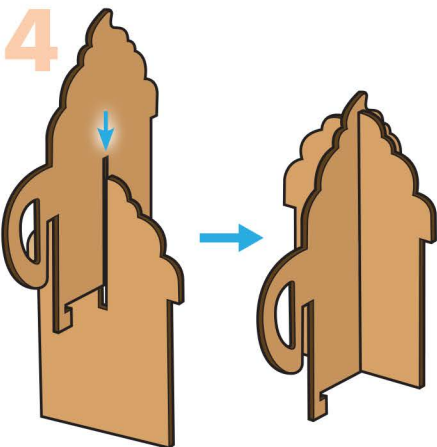


**Step 4** — Fit the cutouts in the **top insert** and **bottom insert**.

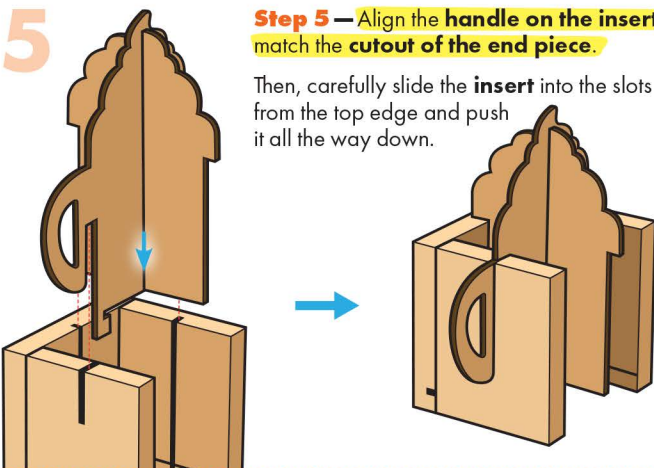


**Step 5** — Align the **handle** on the **insert** to match the **cutout** of the **end piece**.

Then, carefully slide the **insert** into the slots from the top edge and push it all the way down.

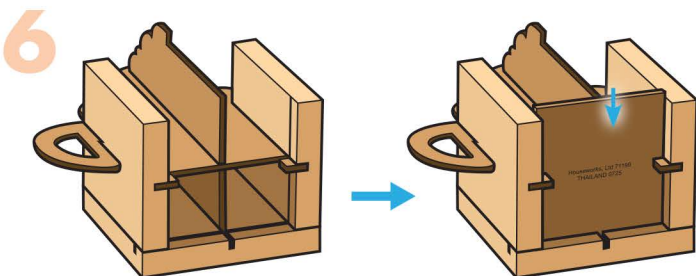

**Step 6** — Lay the **project** open side up. Slide the **bottom piece** into the cutouts and the slot.

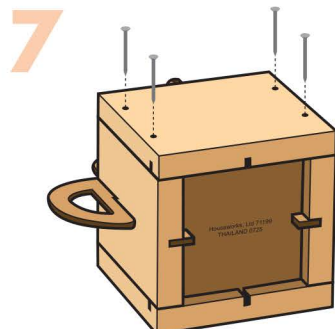

**Step 7** — Fit the remaining **side piece** on top. Make sure the horizontal slot fits on the **bottom piece** and the vertical slot fits on the **insert**. Make sure all corners are even. Nail them together.

(Ver el dorso para instrucciones en español.)

TSCA TITLE VI Compliant

**Painting Tip:** If painting the **project**, paint it and let it dry completely before applying the **stickers** as shown above.

