



WARNING: CHOKING HAZARD


Toy contains small parts and functional/sharp points. Not for children under 4 years old.
Adult supervision required.



HUMVEE

Made in Chonburi, Thailand exclusively for The Home Depot by Houseworks, Ltd
2388 Pleasantdale Road, Atlanta, GA 30340 • batch #171101 • date: 07/17

Contents:

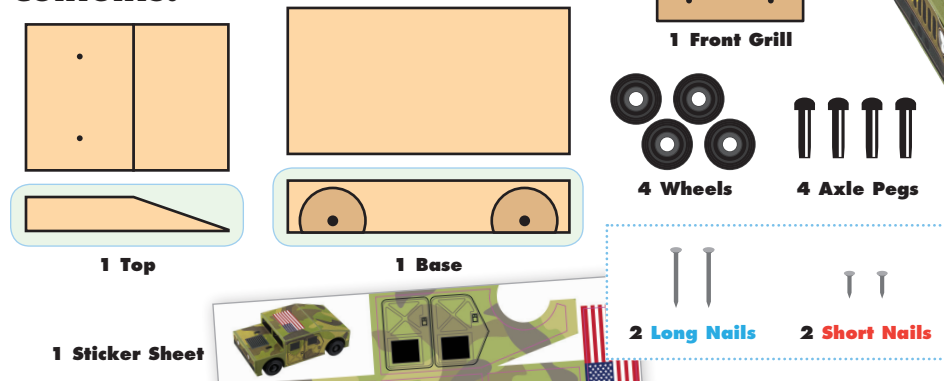


ALSO NEEDED:

- Safety Goggles
- Fine Sandpaper
- Wood Glue
- Hammer

Assembly:


Start with sanding each wood piece to remove any rough edges. Remember to sand in the direction of the wood grain. Glue and nail the pieces together. Allow glue to completely dry.

1

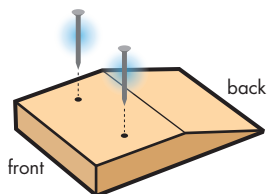


Step 1—Place the **top piece** flat side down. Start 2 **long nails**.

2

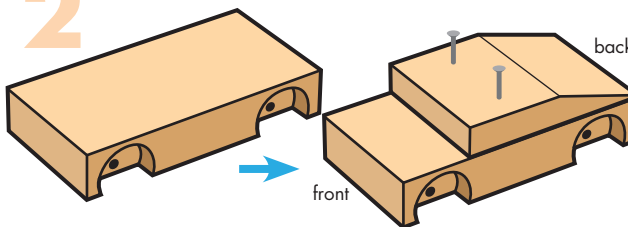


Step 2—Place the **base piece** solid side up. Glue the **top piece** over the **base piece** with the angled edge even with the back end. Make sure side and back edges are even. Nail them together.

3

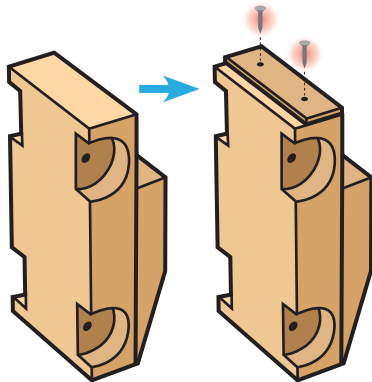

Step 3—Stand the project on the back end. Glue the **front grill** to the front end. Make sure top and side edges are even. Using 2 **short nails**, nail it in place.

4

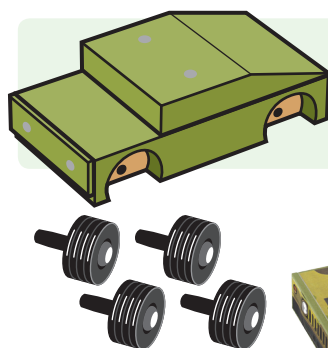

Hint: If you are painting the Humvee, **DO NOT PAINT inside or around the axle holes**. Painting inside or around the axle holes will make it difficult to add **wheels**. Allow the paint to dry completely.

Step 4—Slide an **axle peg** through each **wheel**. Hammer an **axle peg** and **wheel** into each of the 4 axle holes. Apply the **stickers** as shown.

(Ver el dorso para instrucciones en español.)

California 93120 compliant for formaldehyde phase 2