


LOCKER

Made in Thailand exclusively for The Home Depot by Houseworks, Ltd.
 2388 Pleasantdale Road, Atlanta, GA 30340 • 71135 • Thailand 0420

Finished example.



Contents:

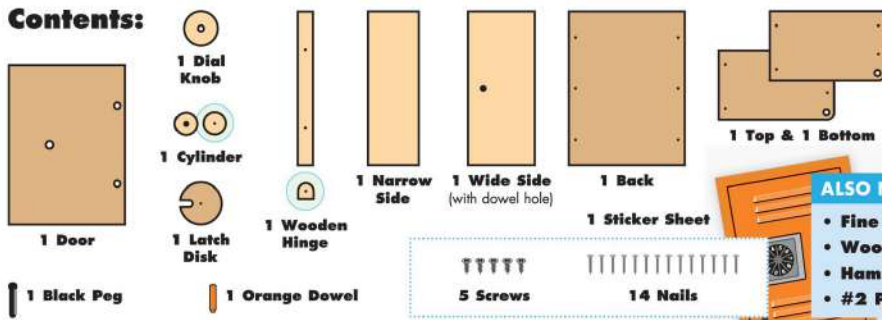

ALSO NEEDED:

- Fine Sandpaper
- Wood Glue
- Hammer
- #2 Phillips Screwdriver

Assembly:

Start with sanding each wood piece to remove any rough edges. Remember to sand in the direction of the wood grain. Glue and nail the pieces together. Allow glue to completely dry.

1

Step 1—Lay the door and dial knob down. Carefully match the holes and apply the stickers.

2

Step 2—Stand the cylinder with the bigger hole on top. Place the door and dial knob on top with the peg holes matching. Carefully hammer the black peg into the holes.

3

Step 3—Turn it over. Using a #2 Phillips Screwdriver, attach the latch disk to the cylinder with a screw. Choose a number and adjust and match the cutout in the latch disk to the number on the dial knob.

4

Step 4—Turn it over. Attach the wooden hinge to the door with 2 screws to complete the door.

5

Step 5—Stand the narrow side piece on the long edge. Place a side edge of the back piece on top. Make sure edges are even. Nail them together with 3 nails.

6

Step 6—Lay the wide side piece flat with the dowel hole on top. Carefully, hammer the orange dowel into the hole. Stand the wide side piece on the long edge with the orange dowel close to the bottom.

7

Step 7—Place the other side edge of the back piece on top. Make sure the orange dowel is on the inside. Make sure edges are even. Nail them together with 3 nails.

8

Step 8—Stand the project up. Place the top piece on top. Make sure edges are even and there is a space for the hinge under the rounded corner. Nail them together with 4 nails. Turn the project over and repeat to attach the bottom piece to form a locker.

Attention: If you are painting the project, paint only the outside of the locker. Don't paint the door or the inside of the locker. Allow the paint to dry completely.

9

Step 9—Slide the hinge end of the door into the space between the rounded corners of the top and bottom pieces. Make sure the screw holes are matching. Attach the door with 2 screws. Adjust the screws so that the door is not too loose or tight. You can open the locker by matching your number to the arrow on the lock pad.



(Ver el dorso para instrucciones en español.)