



WARNING:
CHOKING HAZARD
 Contains small parts and functional/sharp points.
 Not for children under 3 years old.
 Adult supervision required.




5+

MIRRORED VANITY

Made in Thailand exclusively for The Home Depot by Houseworks, Ltd.
2388 Pleasantdale Road, Atlanta, GA 30340 · 71132 · Thailand 0120

Contents:

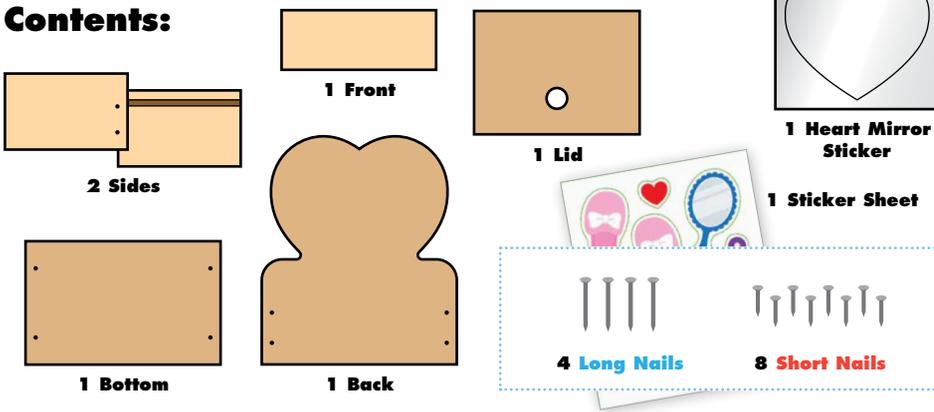

Finished example.


ALSO NEEDED:

- Fine Sandpaper
- Wood Glue
- Hammer


Assembly:

Start with sanding each wood piece to remove any rough edges. Remember to sand in the direction of the wood grain. Glue and nail the pieces together. Allow glue to completely dry.


1 **Step 1**—Place both side pieces flat with the nail holes on top and the slots facing down. Start 4 long nails.

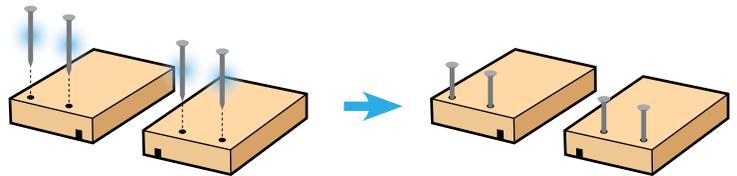


2 **Step 2**—Stand the front piece up. Add a little glue to the top edge. Place one of the side pieces on top. Make sure front and bottom edges are even and the slot is not blocked. Nail them together. Turn it over and repeat to attach the other side piece.

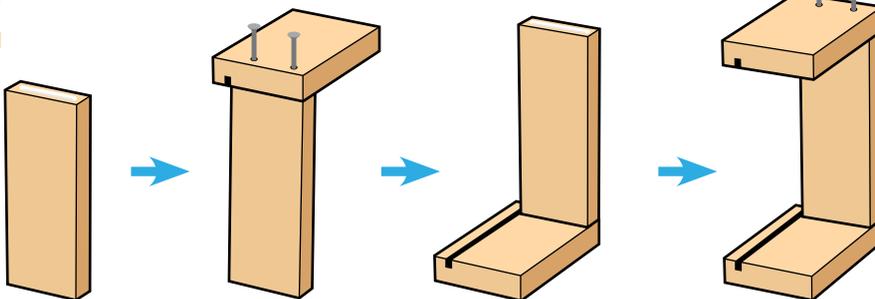

3 **Step 3**—Lay it down with the slots at the bottom. Add thin lines of glue to the top edges. Place the bottom piece on top. Make sure all edges are even. Using 4 short nails, nail it in place.

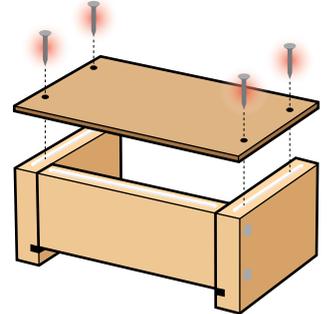

4 **Step 4**—Turn it up with the front piece at the bottom. Add thin lines of glue to the top edge of the side pieces. Place the back piece on top. Make sure side and bottom edges are even. Using 4 short nails, nail it in place. Turn the project right side up. Slide the lid into the slots.

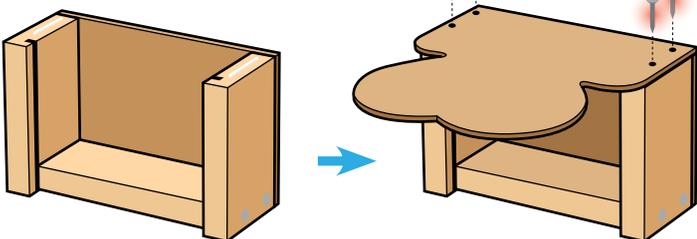

Attention: If you are painting the project, **BE VERY CAREFUL not to paint the slots.** Painting the slots will make it difficult to slide the lid in! Allow the paint to dry completely before applying the stickers.

5 **Step 5**—Apply the heart mirror sticker to the back piece. Apply the other stickers as you like.



(Ver el dorso para instrucciones en español.)