



WARNING: CHOKING HAZARD


Contains small parts and functional/sharp points.
Not for children under 4 years old.
Adult supervision required.




WINDOW BIRDHOUSE

Made in Chonburi, Thailand exclusively for The Home Depot by Houseworks, Ltd
2388 Pleasantdale Road, Atlanta, GA 30340 · batch #171106 · date: 12/17


Contents:

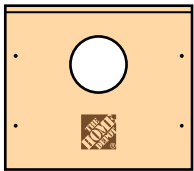


1 Front

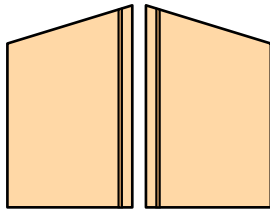

2 Sides

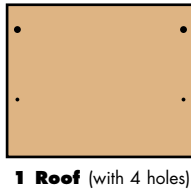

1 Roof (with 4 holes)

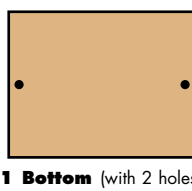

1 Bottom (with 2 holes)

1 Clear Plastic Sheet



2 Suction Cup Hooks



4 Long Nails




2 Screws



2 Screw Eyes



2 Short Nails

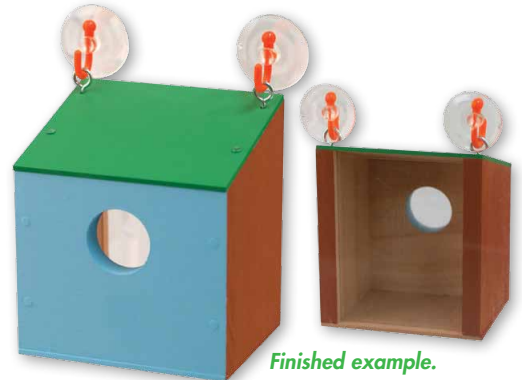


Finished example.

ALSO NEEDED:


- Safety Goggles
- Fine Sandpaper
- Wood Glue
- Hammer
- Phillips Head Screwdriver

Assembly:


Start with sanding each wood piece to remove any rough edges. Remember to sand in the direction of the wood grain. Glue and nail the pieces together. Allow glue to completely dry.

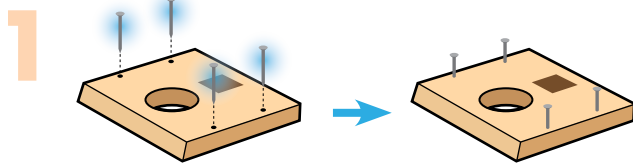


Step 1 — Place the front piece flat with the nail holes and the logo on top. Start 4 long nails.

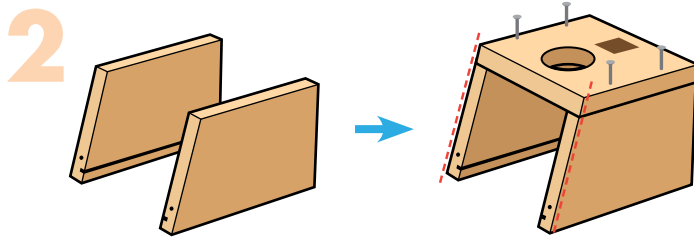


Step 2 — Stand both side pieces on the long edges. Make sure the slots are at the bottom and facing in. Carefully spread them about 4 inches apart. Glue the front piece on top. Make sure the angled edges are matching and all edges are even. Finish nailing.

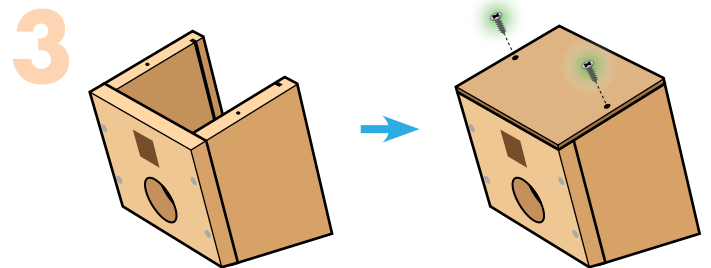

Step 3 — Turn the project on the angled edge. Place the bottom piece on top. Match the holes on the bottom piece to the holes on the side pieces. Attach them together with 2 screws (DO NOT glue the bottom piece).

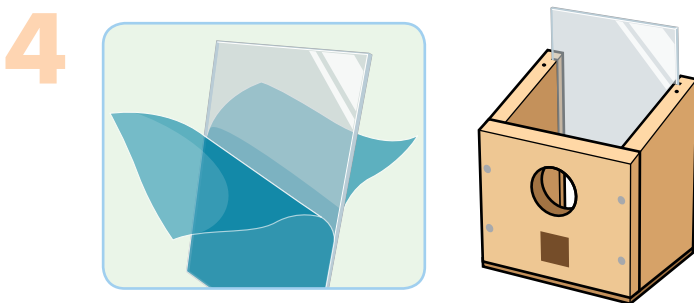

Step 4 — Peel off the protective sheets from BOTH sides of the clear plastic sheet. Turn the project over. Slide the clear plastic sheet into the slots.

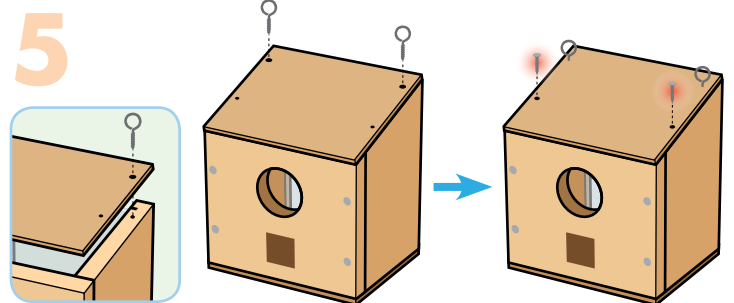

Step 5 — Add thin lines of glue to the top edges. Place the roof piece on top. Match the bigger holes on the roof piece to the holes on the side pieces. Twist 2 screw eyes into them. Then, using 2 short nails, nail through the remaining holes.

Attention: If you are painting the project, make sure NOT to paint the clear plastic sheet. Painting the clear plastic sheet will make it difficult or unable to see inside of the birdhouse. Allow the paint to dry completely.

At Home: Hook the suction cup hooks through the screw eyes. Push the suction cups against a clean window at least 4 feet above the ground. To clean, unscrew to remove the bottom piece.

(Ver el dorso para instrucciones en español.)

California 93120 compliant for formaldehyde phase 2